 



FlyingBoats! Firmware Update Instructions

15 June 2023


1. Remove the four screws from the front panel using a Phillips head screwdriver. Slide the front panel out and locate the USB-C connector on the WiFi daughterboard.

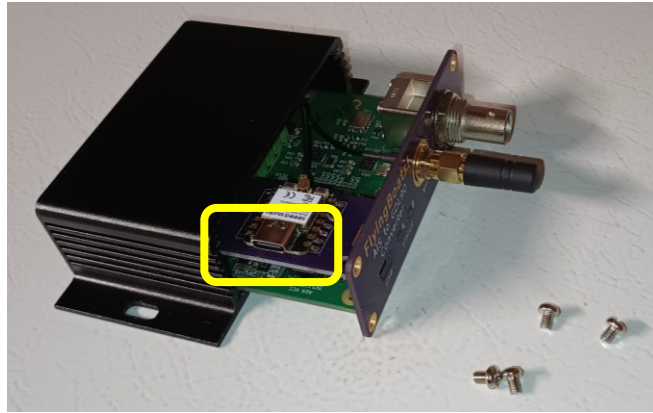

 - a.
2. Use a USB-C cable to connect the WiFi daughterboard to your Windows PC.
 3. Download the firmware update ZIP file and unzip/extract the contents.
 4. Locate the "update.exe" file and double click on it to run it.

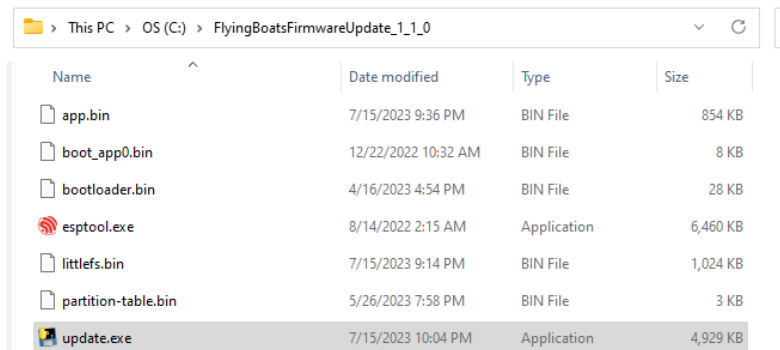

 - a.
5. A screen will pop up and the firmware update will start. It should take about one minute to complete. When the screen tells you that the firmware update is complete, press Enter to exit.

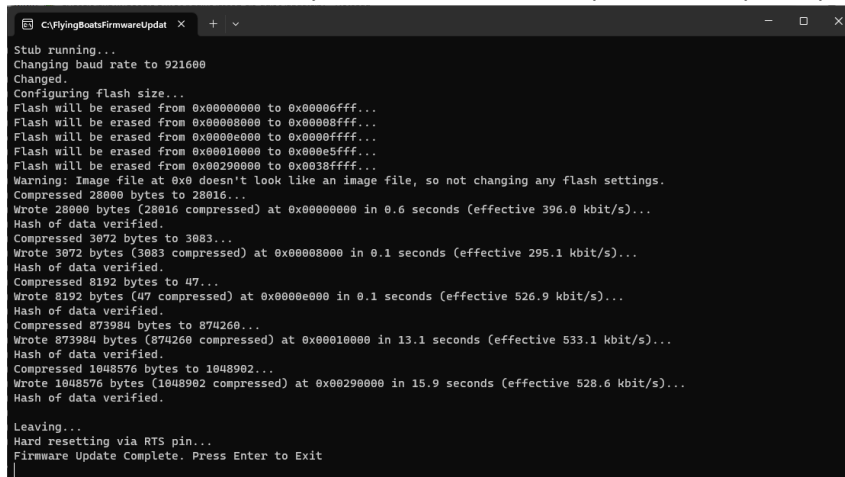

a.